


REBEL & Chrome Dome Installation Guide

Step by step fitting instructions for the REBEL and Chrome Dome replacement strimmer heads below.

Easy to fit, NO tools needed. Collets, nuts and bolts are included with the REBEL & Chrome Dome to suit most strimmers.

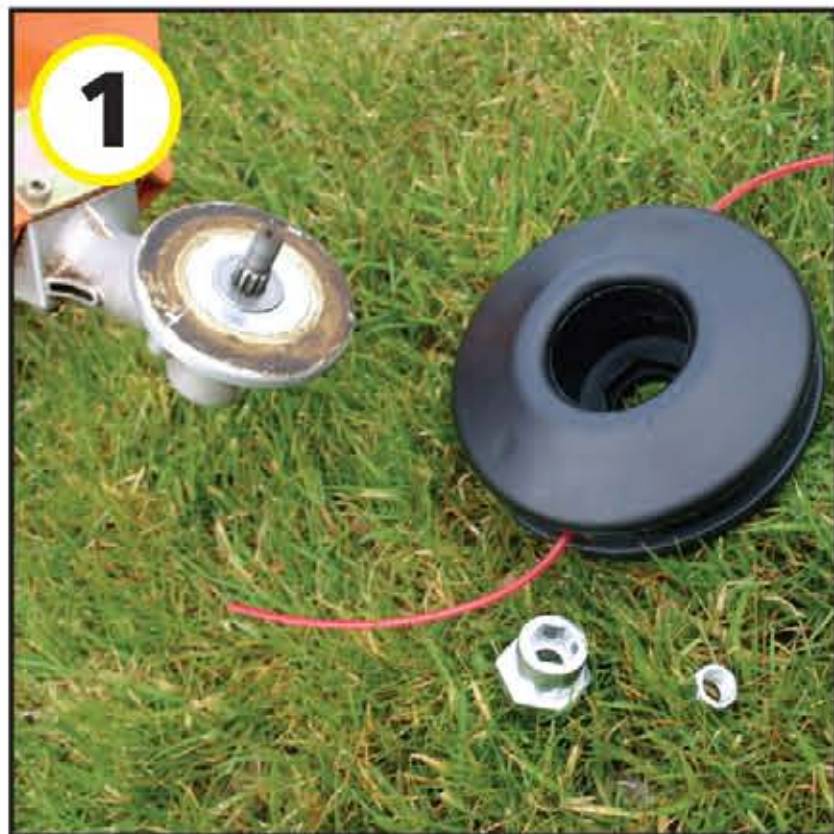


1 Pick collett and nut or bolt that fits your machine.



2 Place nut or bolt inside collett, and push into recess of head.



3 Locate unit onto the gearbox making sure it is centred and the right collett is selected.

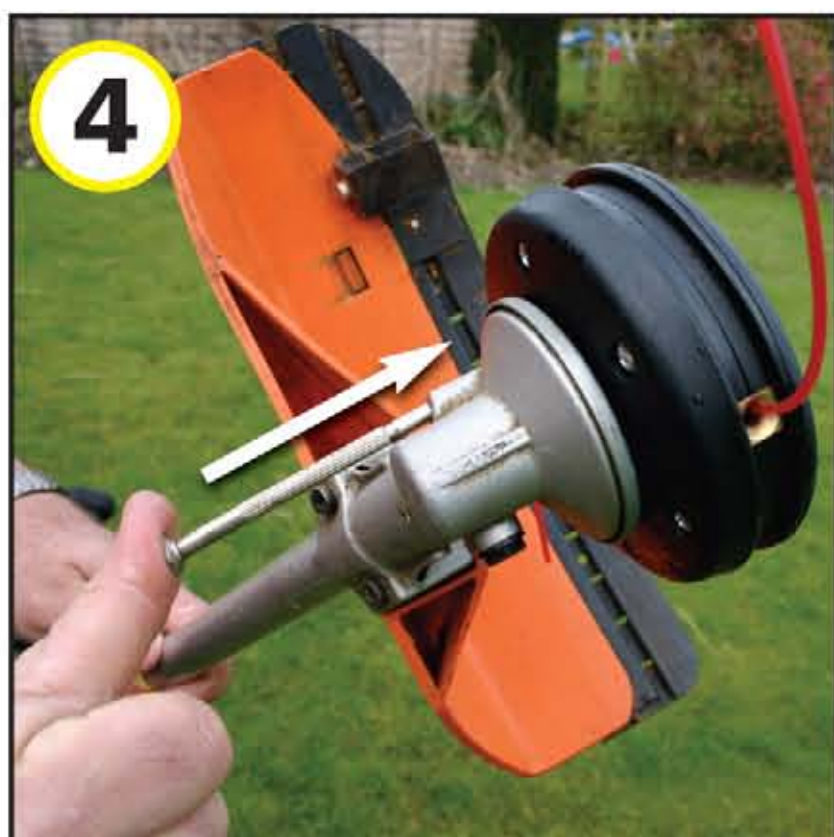

4 Lock gearbox to prevent rotation with suitable pin or screwdriver.



5 Wind head onto gearbox until hand-tight. Remember it could be a left hand thread!



6 Job Done! Ready to go.

Fits Most Straight Shaft Petrol Strimmers